
# Sentinel Door Controls, LLC


Phone 1.800.327.7848 Fax 1.888.412.3667 sales@sentineldoor.com estimating@sentineldoor.com www.sentineldoor.com


#### FRICTION HOLD OPEN ARM

**4016 SERIES DOOR CLOSER** 


**INSTALLATION INSTRUCTIONS** 

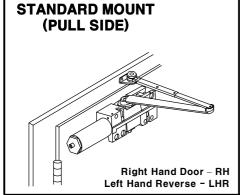

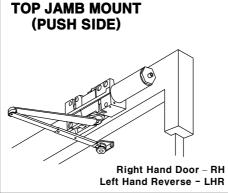

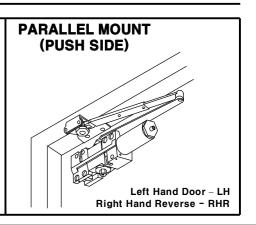


DOOR CLOSER SIZE	MAXIMUM DOOR WIDTH		FULL TURNS OF POWER
	EXTERIOR (SWING OUT)	INTERIOR	ADJUSTMENT SCREW
1	28"(0.71m)	32"(0.81m)	7C.C.W
2	32"(0.81m)	36"(0.91m)	4C.C.W
3	36"(0.91m)	42"(1.07m)	0(PRESET)
4	42"(1.07m)	48"(1.22m)	5C.C.W
5	48"(1.22m)	54"(1.22m)	10C.C.W
6	54"(1.37m)	58"(1.47m)	15C.C.W

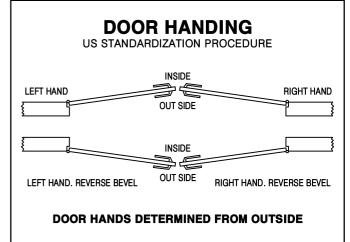


#### (+) = CLOCKWISE (-) = COUNTER CLOCKWISE


PLEASE NOTE
TURNS REQUIRED ARE APPROXIMATE
BECAUSE OF VARIOUS DOOR CONDITIONS
AND LOCATIONS. YOU MAY HAVE TO
FURTHER ADJUST SPRING TENSION TO
SUIT YOUR REQUIREMENTS.

IT IS IMPORTANT TO CAREFULLY FOLLOW ALL INSTALLATION AND MOUNTING INSTRUCTIONS WHEN INSTALLING ANY DOOR CLOSER.

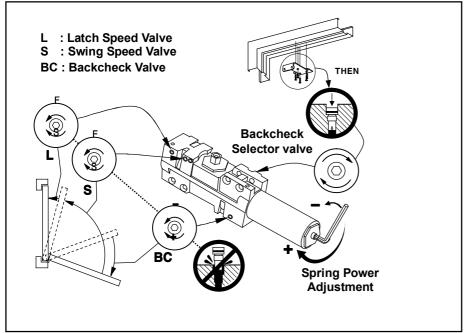


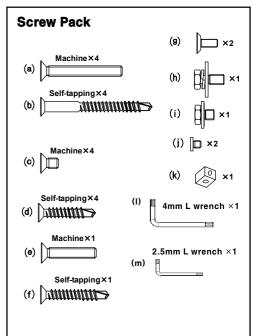

### PULL SIDE (DOOR JAMB) HOLD-OPEN ARM STANDARD MOUNT

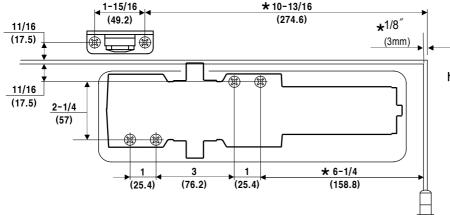

 
Hold-open arm. Identify direction of hold-open nut according to mounting.




- Do Not Scale Drawing
  - Dimensions : inches(mm)

## PUSH SIDE (TOP JAMB) HOLD-OPEN ARM TOP JAMB MOUNT

LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

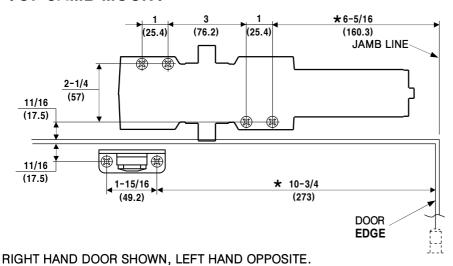


 Hold-open arm. Identify direction of hold-open nut according to mounting.




- Hold-open (85° ~120°)
  - Do Not Scale Drawing
  - Dimensions : inches(mm)

### PUSH SIDE (DOOR MOUNT) HOLD-OPEN ARM PARALLEL MOUNT

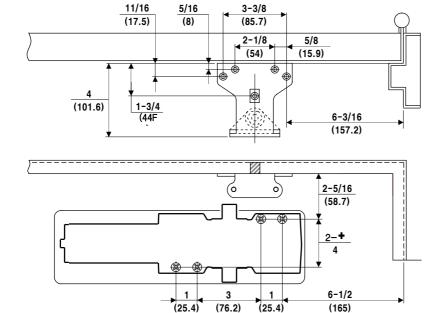

Hold-open arm. Identify direction of hold-open nut according to mounting.

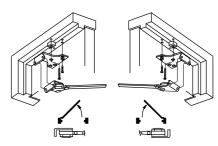

Hold-open (85° ~180°)

- Do Not Scale Drawing
- Dimensions : inches(mm)

RIGHT HAND DOOR SHOWN, LEFT HAND OPPOSITE.